






請勿直視槍口。

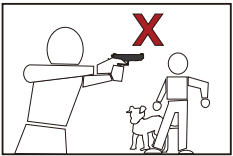


嚴禁將槍口指向人或動物。

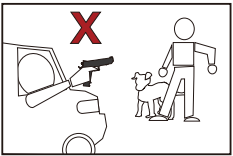


本產品並非玩具，請依當地法令及安全規範使用。

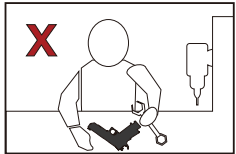


請勿自行拆解或改裝本產品。

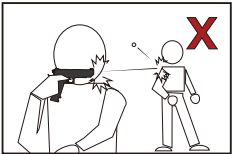


請於射擊前再裝填 BB 彈。

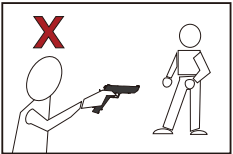


操作時請確認周遭環境及人員安全。

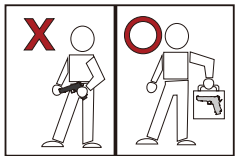


公共場所攜帶時，請放置於槍袋或槍箱內。

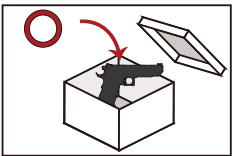


請置於孩童無法取得之處。

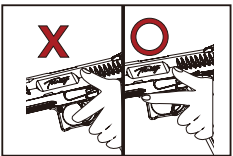

未準備射擊前，請勿將手指放置於扳機上。

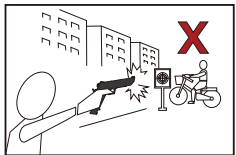


請勿在人員或車輛附近射擊。

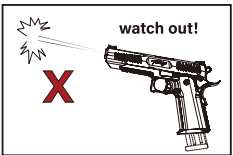

卸下彈匣後，請確認槍膛內無殘彈。



非射擊狀態請保持保險於 SAFE 位置。

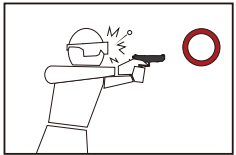

濫用可能造成嚴重傷害，使用時應確保本身及射程範圍內所有人員均已確實穿戴護目鏡。

安全警告

- 不同型號或版本之操作方式可能略有差異，請依照對應產品說明操作。
- 摩帝企業對於因操作不當、處置不當、擅自改裝或拆解所造成之事故、人身傷害、財物損失或維修費用，概不負責。
- 因自行拆裝或改裝所產生之故障，維修費用由使用者自行負擔。



Tyrant 2011 Detail Manual



TYRANT 2011

GAS / CO2 後座力手槍 使用說明書



Lorem ipsum



886-3-379-8879



886-3-369-5091



sales@modify.com.tw
marketing@modify.com.tw



台灣桃園市八德區永豐路384巷21號



WEBSITE




INSTAGRAM




FACEBOOK

技術規格表

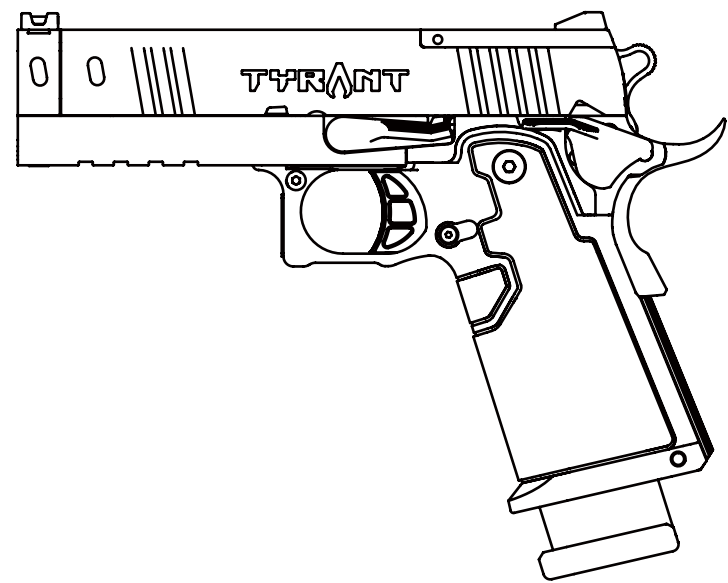


	Tyrant 2011 緊致版
重量	0.51 kg (不含彈匣)
全長	202 mm
內管長度	91 mm
內管口徑	6.03 mm
Hop Up	Adjustable
彈種	6 mm BB
操作溫度	20~25°C 68~77°F
出廠初速	Gas:280 FPS / CO2:340 FPS
彈匣容量	26~28 rds
實際初速可能因銷售地區法規而有所不同,請遵守當地相關法律規定。	

技術規格表

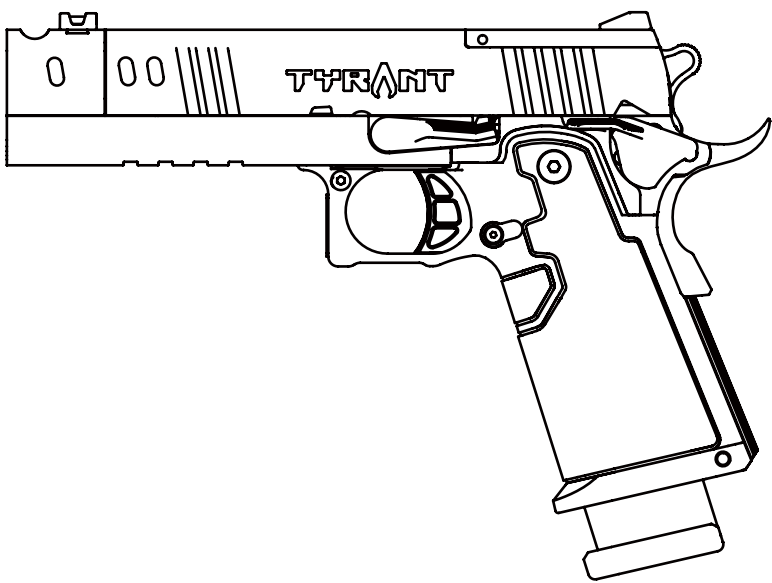

	Tyrant 2011 標準版
重量	0.54 kg (no magazine)
全長	218 mm
內管長度	97 mm
內管口徑	6.03 mm
Hop Up	Adjustable
彈種	6 mm BB
操作溫度	20~25°C 68~77°F
出廠初速	Gas:295 FPS / CO2:345 FPS
彈匣容量	26~28 rds
實際初速可能因銷售地區法規而有所不同,請遵守當地相關法律規定。	

技術規格表

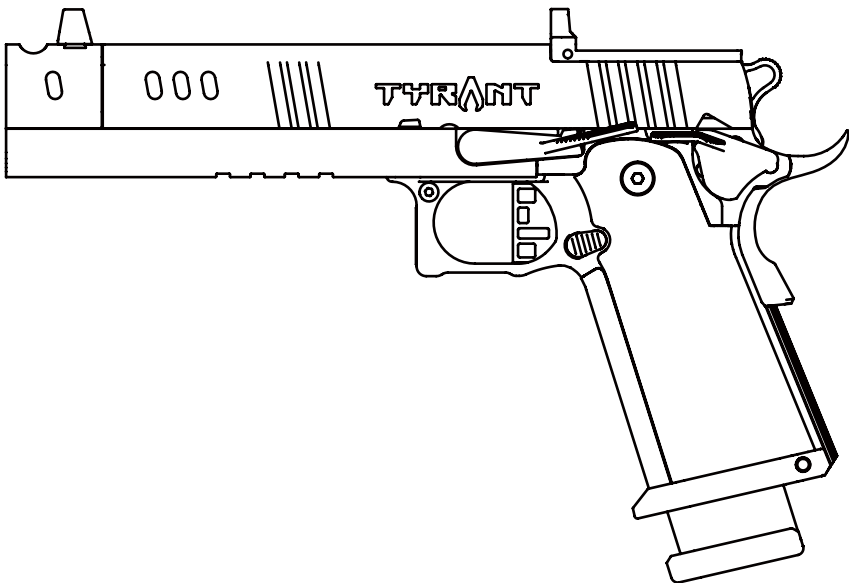

	Tyrant 2011 加長版
重量	0.63 kg (no magazine)
全長	246 mm
內管長度	126 mm
內管口徑	6.03 mm
Hop Up	Adjustable
彈種	6 mm BB
操作溫度	20~25°C 68~77°F
出廠初速	Gas:310 FPS / CO2:360 FPS
彈匣容量	26~28 rds
實際初速可能因銷售地區法規而有所不同,請遵守當地相關法律規定。	



TYRANT 2011

GAS BLOWBACK

INSTRUCTION MANUAL



886-3-379-8879



886-3-369-5091



sales@modify.com.tw
marketing@modify.com.tw



NO.21, Ln.384, Yongfeng Rd. Bade Dist,
Taoyuan City 334015, Taiwan




WEBSITE




INSTAGRAM




FACEBOOK

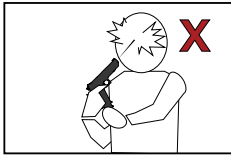


Never look into a muzzle.

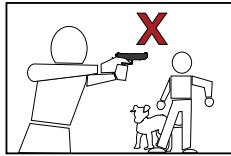


Never aim or shoot people or animals.

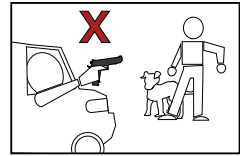


Never treat a airsoft gun as toy. Always use a airsoft gun carefully to avoid injury and liability.

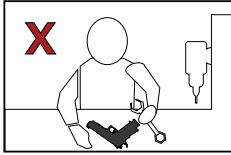


Never disassemble or modify airsoft gun without authorized help to avoid hazard and danger.

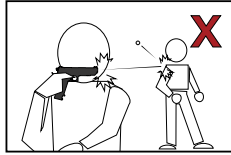


Do not load airsoft gun until ready to use.

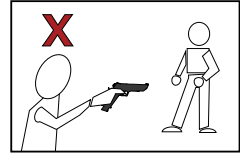


Pay attention also to onlookers not operating airsoft gun.

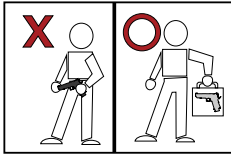


Only carry airsoft gun in public inside a case.

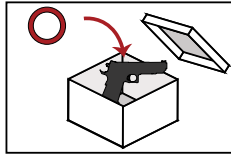


Store airsoft gun out of reach of children.

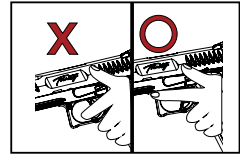

Always keep your fingers away from trigger until ready to shoot.

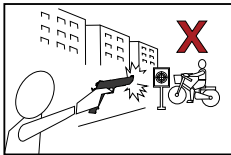


Never shoot airsoft gun near people and vehicles.

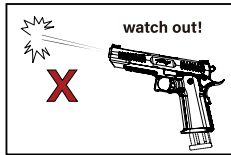

BBs may be fired even if a magazine is removed.



Always set selector to Safety until ready to shoot.

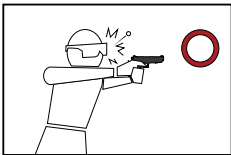


Always wear eye protection when target shooting or combating to protect also against ricochet.



WARNING


- The operation varies according to the model. Learn the features before using airsoft gun.
- Modify-Tech is not liable for accidents, injuries or repair costs resulting from wrongful operation, handling, modification and disassembly.
- Users are liable for repair costs if guns are damaged due to DIY work.

SPECIFICATIONS

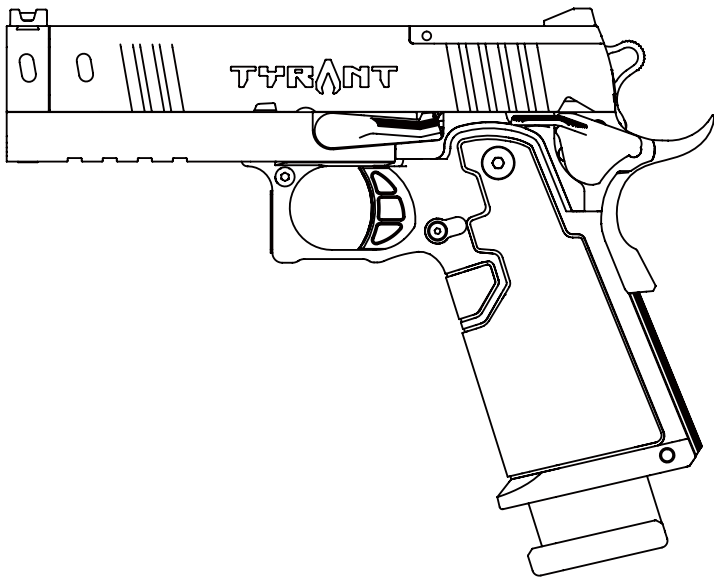


	Tyrant 2011 Compact
WEIGHT	0.51 kg (no magazine)
LENGTH	202 mm
BARREL LENGTH	91 mm
BARREL CALIBER	6.03 mm
HOP UP	Adjustable
PELLET TYPE	6 mm BB
OPERATING TEMPERATURE	20~25°C 68~77°F
INITIAL SPEED (Normal)	Gas:280 FPS / CO2:340 FPS
MAGAZINE	26~28 rds
The actual velocity is different between countries, and strictly follows the countries' law requirement as accordingly.	

SPECIFICATIONS

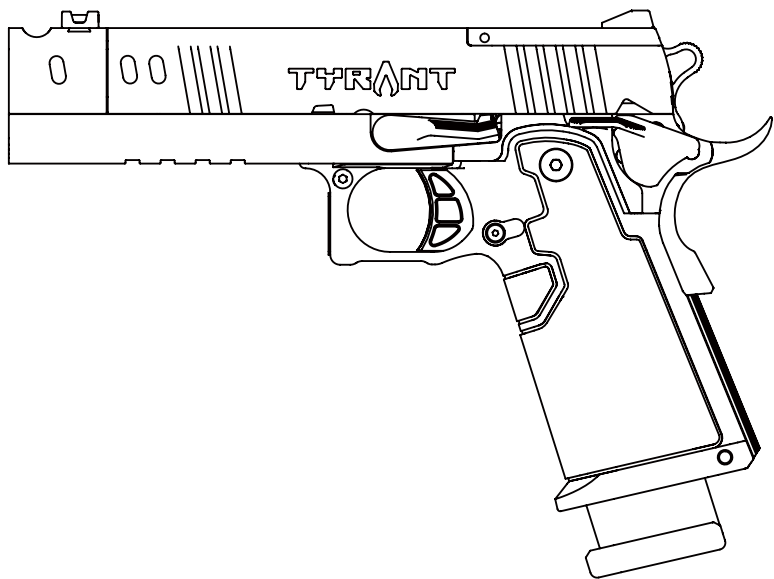

	Tyrant 2011 Full Size
WEIGHT	0.54 kg (no magazine)
LENGTH	218 mm
BARREL LENGTH	97 mm
BARREL CALIBER	6.03 mm
HOP UP	Adjustable
PELLET TYPE	6 mm BB
OPERATING TMEPERATURE	20~25°C 68~77°F
INITIAL SPEED (Normal)	Gas:295 FPS / CO ₂ :345 FPS
MAGAZINE	26~28 rds
The actual velocity is different between countries, and strictly follows the countries' law requirement as accordingly.	


SPECIFICATIONS

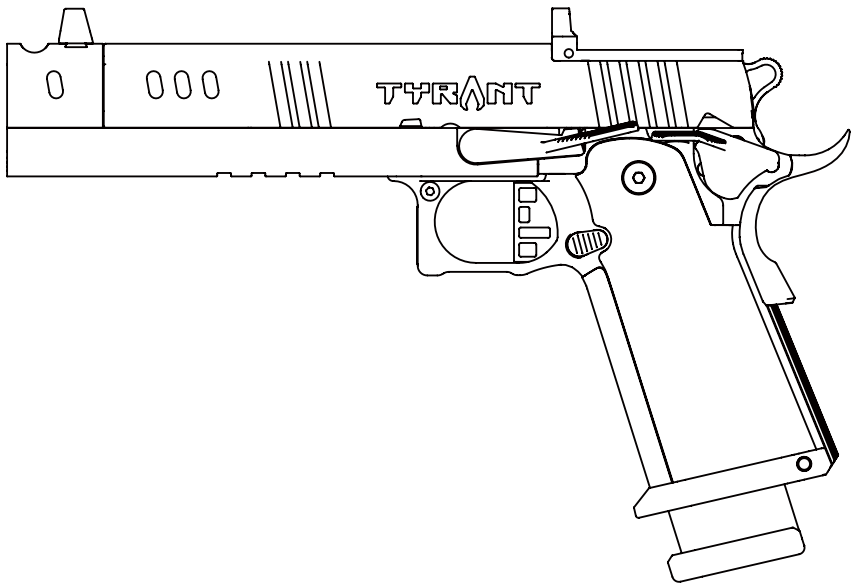


	Tyrant 2011 PrimeMax
WEIGHT	0.63 kg (no magazine)
LENGTH	246 mm
BARREL LENGTH	126 mm
BARREL CALIBER	6.03 mm
HOP UP	Adjustable
PELLET TYPE	6 mm BB
OPERATING TEMPERATURE	20~25°C 68~77°F
INITIAL SPEED (Normal)	Gas:310 FPS / CO ₂ :360 FPS
MAGAZINE	26~28 rds
The actual velocity is different between countries, and strictly follows the countries' law requirement as accordingly.	

MAINTENANCE

Drop a few drops of silicone oil from the pellet entrance, then fire pullets equivalent to 1 or 2 magazine. Use the cleaning rod (with cotton) as shown below, to remove the excess oil to complete the maintenance.

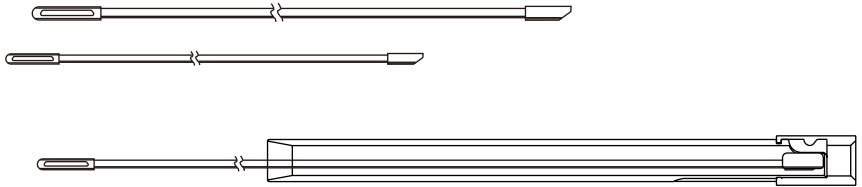



Always begin the maintenance by returning the hop up adjustment lever to the Normal (HOP off) position. The inside chamber is a precision component, it can be damaged easily. Be careful during maintenance. Never use any used pellets.

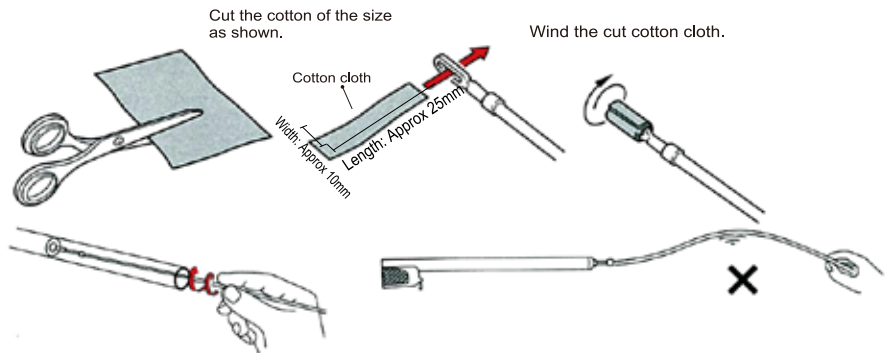



How to use a cleaning rod ?

Cut a cotton cloth to the size as shown and insert one side into the hole in the rod. (Adjust the length of the cloth for smooth entry into the barrel.)

HOP-UP Adjustment

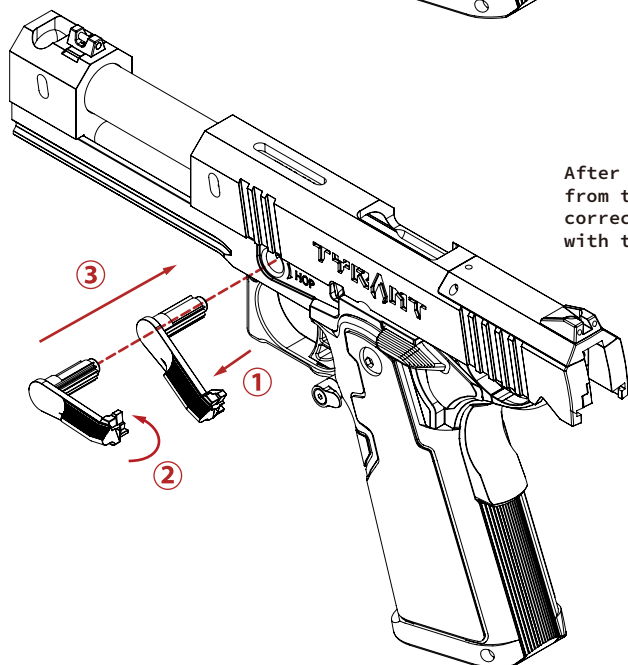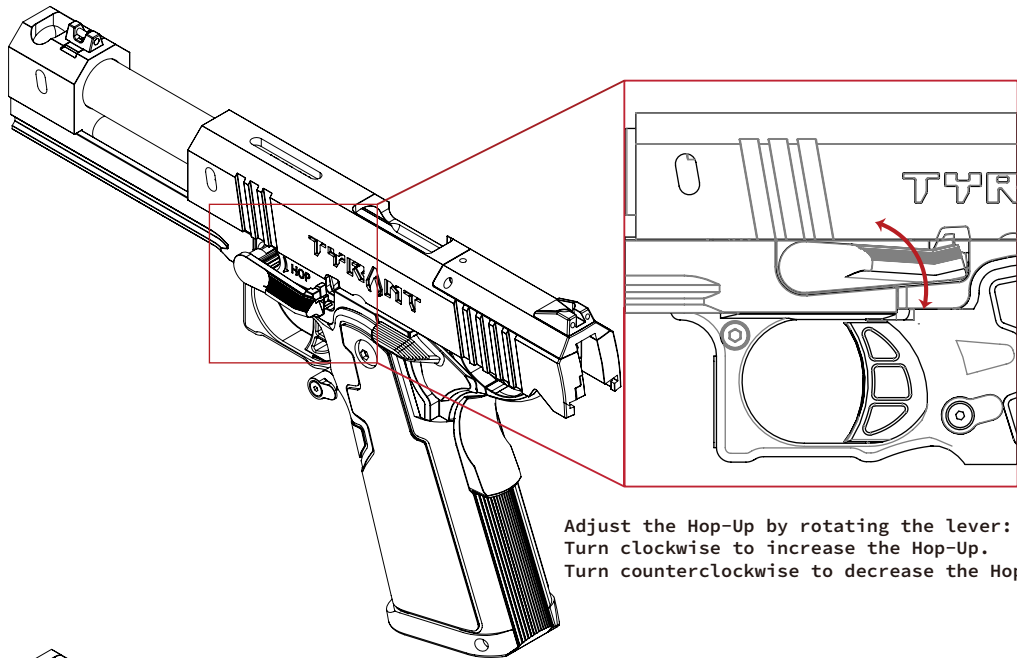


Switch Between Rails

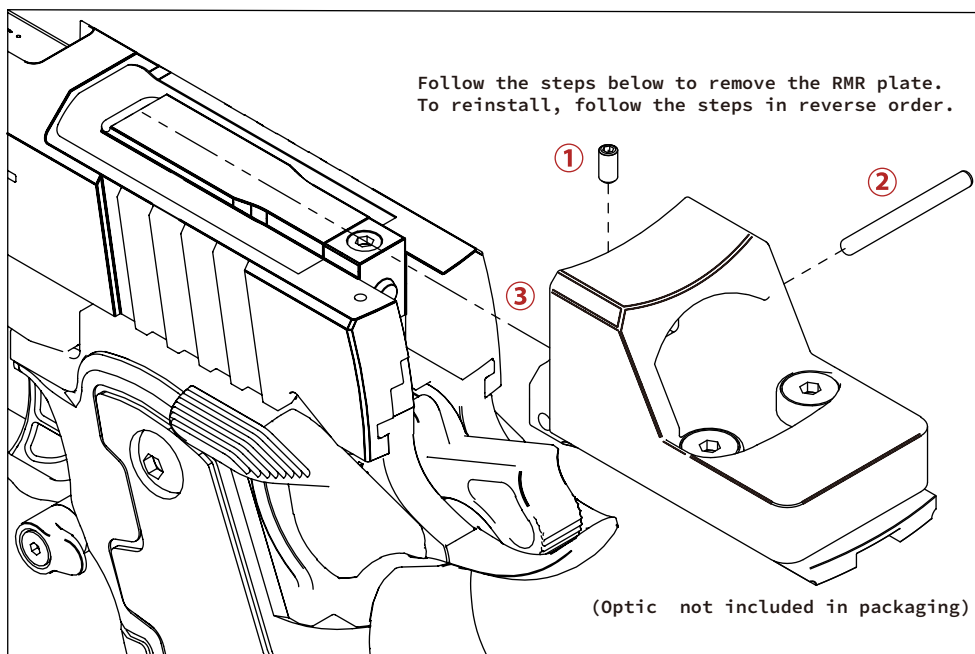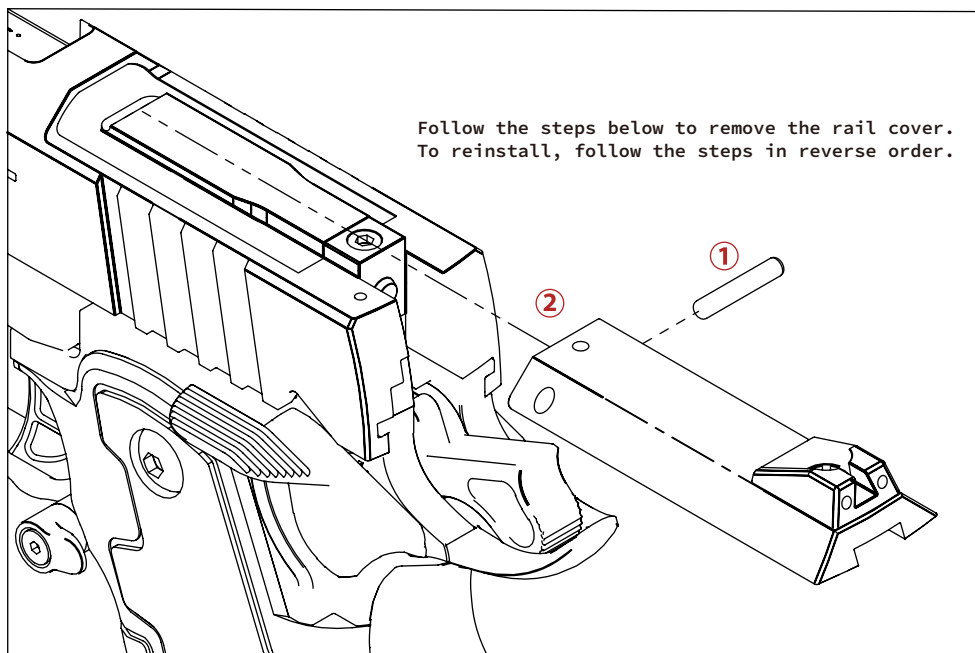

EXPLODED VIEW


Compact Version

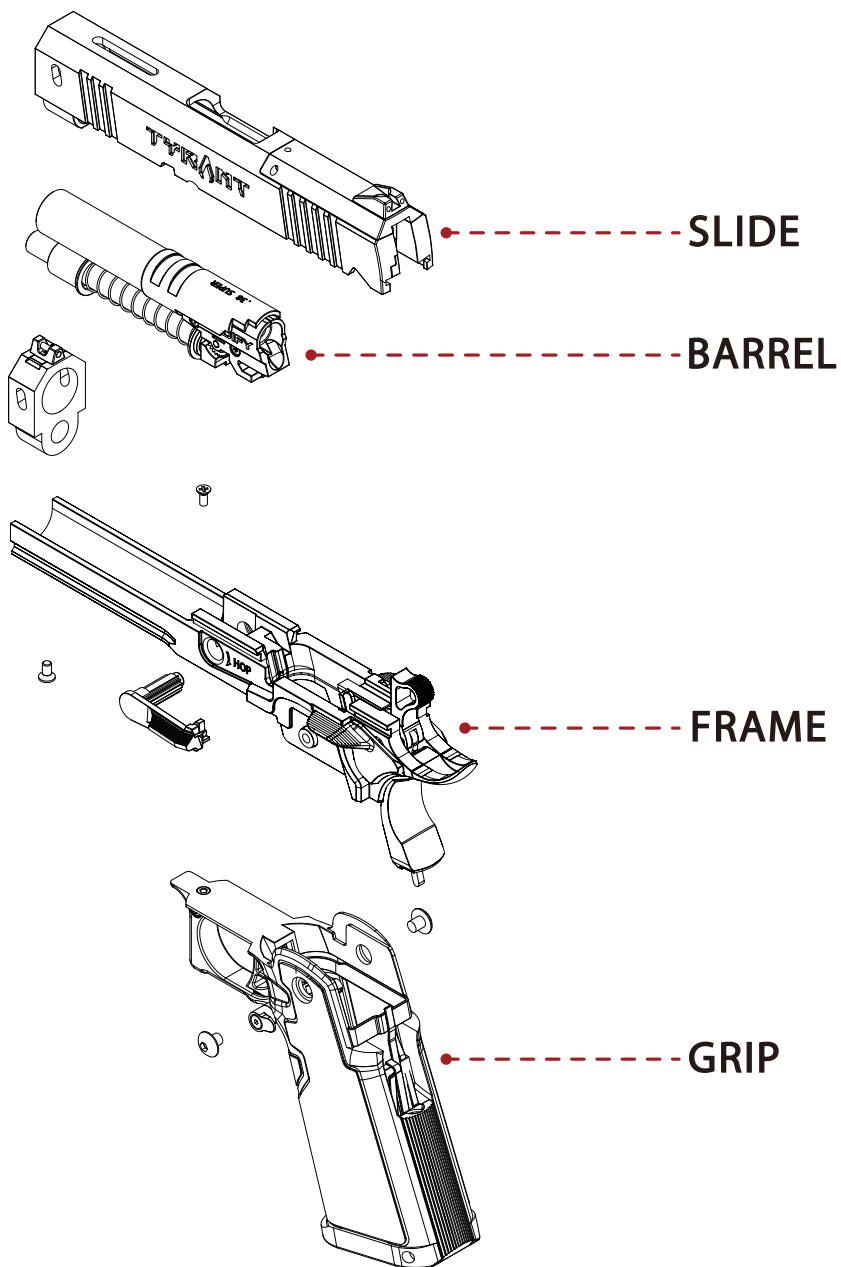


EXPLODED VIEW

Compact Version


BARREL

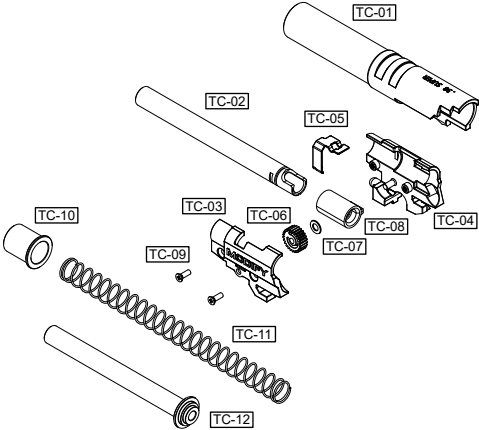


SLIDE

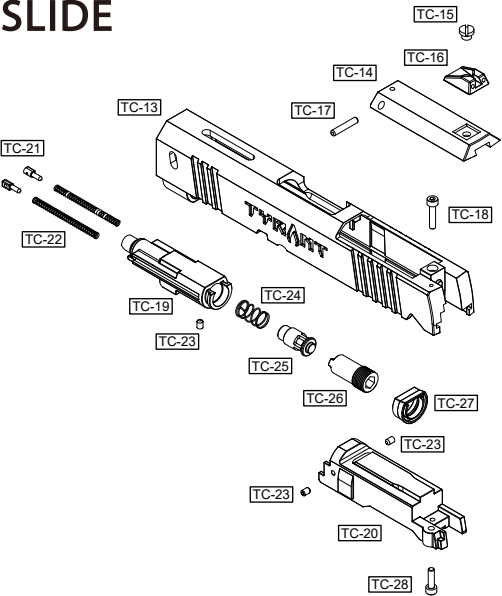

FRAME

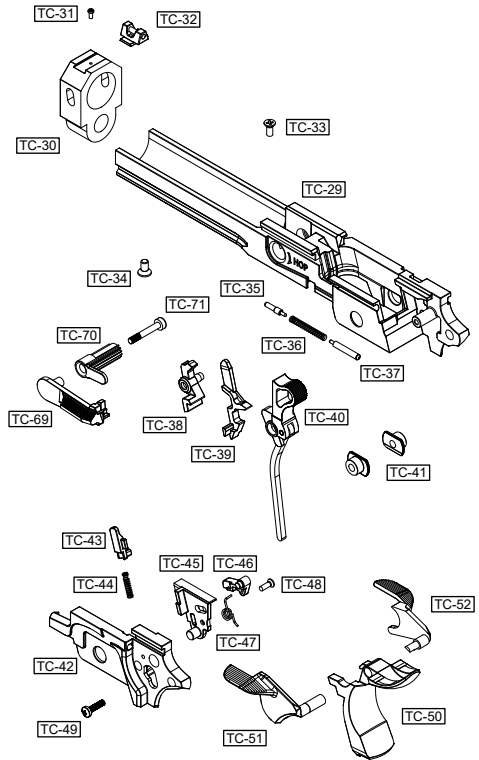

GRIP

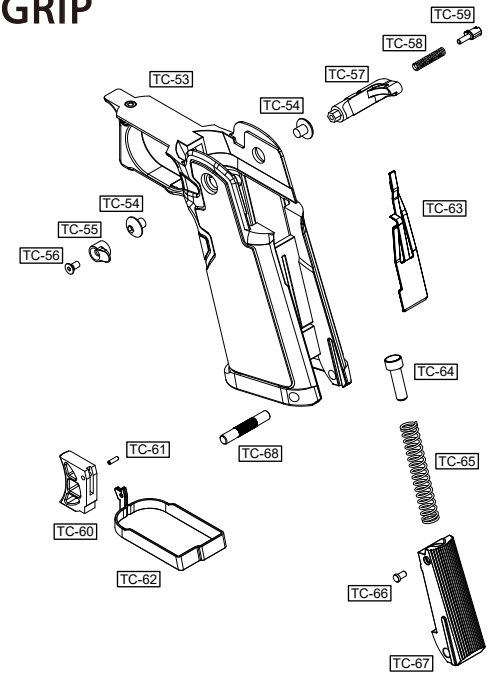

Parts List


Compact Version

No.	Part Name	Qty.
TC-01	Outer Barrel	1
TC-02	Inner Barrel	1
TC-03	Hop-Up Chamber (L)	1
TC-04	Hop-Up Chamber (R)	1
TC-05	Hop-Up Plate	1
TC-06	Hop Adjustment Gear	1
TC-07	Washer	1
TC-08	Hop-Up Bucking	1
TC-09	Screw M2x6	2
TC-10	Recoil Spring Guide Plug	1
TC-11	Recoil Spring	1
TC-12	Spring Guard	1
TC-13	Slide	1
TC-14	Rail Cover	1
TC-15	Screw M4x2.6	1
TC-16	Rear Sight	1
TC-17	Rail Cover Pin	1
TC-18	Screw M2.5x12	1
TC-19	Air Nozzle	1
TC-20	Nozzle Housing	1
TC-21	Spring Block	2
TC-22	Nozzle Spring	2
TC-23	Set Screw M2x3	3
TC-24	Valve Spring	1
TC-25	Valve	1
TC-26	Valve Adjustment	1
TC-27	Airtight Rubber	1
TC-28	Screw M2.5x8	1
TC-29	Frame	1
TC-30	Compensator	1
TC-31	Screw M1.4x3	1
TC-32	Front Sight	1
TC-33	Screw M2.5x6	1
TC-34	Screw M3x6	1
TC-35	Plunger Pin Front	1
TC-36	Plunger Spring	1
TC-37	Plunger Pin Back	1
TC-38	Sear	1
TC-39	Disconnecter	1
TC-40	Hammer Set	1
TC-41	Grip Screw Bushing	2
TC-42	Frame Cover	1
TC-43	Knocker Lock	1
TC-44	Knocker Lock Spring	1
TC-45	Knocker Housing	1
TC-46	Knocker	1
TC-47	Knocker Spring	1
TC-48	Screw M2x6	1
TC-49	Screw M2.5x8	1
TC-50	Grip Safety	1

[illegible]

EXPLODED VIEW

Full Size Version

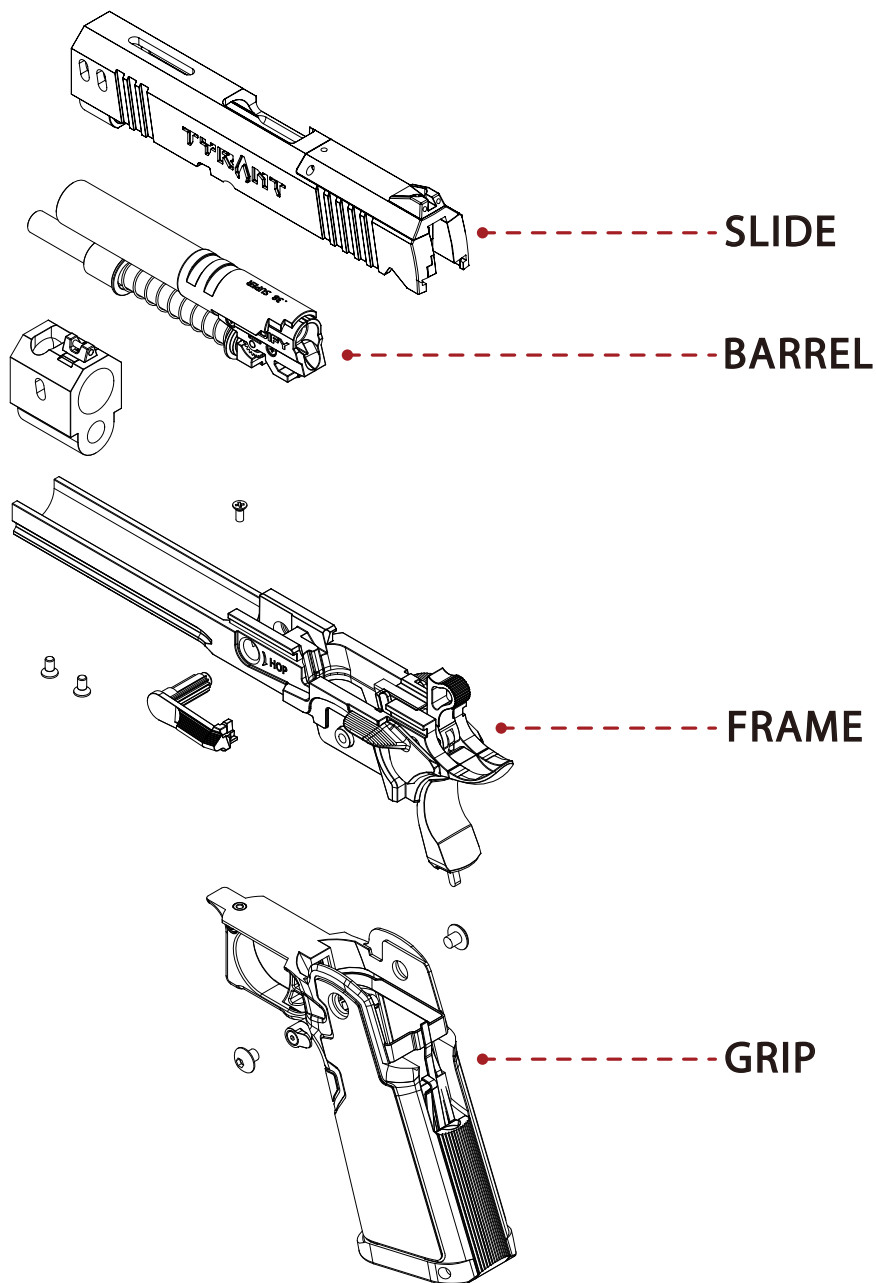

Full Size Version

Exploded view diagram of a BB barrel assembly. The components are labeled as follows:

- TF-01: Barrel cap
- TF-02: Barrel
- TC-03: Trigger gun
- TC-04: Trigger gun
- TC-05: Trigger gun
- TC-06: Trigger gun
- TC-07: Trigger gun
- TC-08: Trigger gun
- TC-09: Trigger gun
- TC-10: Trigger gun
- TC-11: Trigger gun
- TF-03: Trigger gun

SLIDE

This exploded view diagram illustrates the components of the SLIDE assembly. The main body is labeled TF-04. Other components include TC-15 (a small pin), TC-16 (a bracket), TC-14 (a long rail), TC-17 (a small pin), TC-18 (a small pin), TC-21 (a small pin), TC-22 (a long rail), TC-19 (a small pin), TC-23 (a small pin), TC-24 (a spring), TC-25 (a small pin), TC-26 (a small pin), TC-27 (a small pin), TC-28 (a small pin), TC-29 (a small pin), TC-30 (a small pin), TC-31 (a small pin), TC-32 (a small pin), TC-33 (a small pin), TC-34 (a small pin), TC-35 (a small pin), TC-36 (a small pin), TC-37 (a small pin), TC-38 (a small pin), TC-39 (a small pin), TC-40 (a small pin), TC-41 (a small pin), TC-42 (a small pin), TC-43 (a small pin), TC-44 (a small pin), TC-45 (a small pin), TC-46 (a small pin), TC-47 (a small pin), TC-48 (a small pin), TC-49 (a small pin), TC-50 (a small pin), TC-51 (a small pin), TC-52 (a small pin), TC-53 (a small pin), TC-54 (a small pin), TC-55 (a small pin), TC-56 (a small pin), TC-57 (a small pin), TC-58 (a small pin), TC-59 (a small pin), TC-60 (a small pin), TC-61 (a small pin), TC-62 (a small pin), TC-63 (a small pin), TC-64 (a small pin), TC-65 (a small pin), TC-66 (a small pin), TC-67 (a small pin), TC-68 (a small pin), TC-69 (a small pin), TC-70 (a small pin), TC-71 (a small pin), TC-72 (a small pin), TC-73 (a small pin), TC-74 (a small pin), TC-75 (a small pin), TC-76 (a small pin), TC-77 (a small pin), TC-78 (a small pin), TC-79 (a small pin), TC-80 (a small pin), TC-81 (a small pin), TC-82 (a small pin), TC-83 (a small pin), TC-84 (a small pin), TC-85 (a small pin), TC-86 (a small pin), TC-87 (a small pin), TC-88 (a small pin), TC-89 (a small pin), TC-90 (a small pin), TC-91 (a small pin), TC-92 (a small pin), TC-93 (a small pin), TC-94 (a small pin), TC-95 (a small pin), TC-96 (a small pin), TC-97 (a small pin), TC-98 (a small pin), TC-99 (a small pin), TC-100 (a small pin).

This exploded view diagram illustrates the front assembly of the device. The components are labeled as follows:

- TC-31**: Top cover plate.
- TC-32**: Small mounting pin.
- TF-06**: Front faceplate with a circular cutout.
- TC-33**: Small mounting pin.
- TF-05**: Main front chassis or frame.
- TC-34**: Two small mounting pins.
- TC-35**: Small mounting pin.
- TC-36**: Small mounting pin.
- TC-37**: Small mounting pin.
- TC-38**: Small mounting pin.
- TC-39**: Small mounting pin.
- TC-40**: Small mounting pin.
- TC-41**: Small mounting pin.
- TC-42**: Small mounting pin.
- TC-43**: Small mounting pin.
- TC-44**: Small mounting pin.
- TC-45**: Small mounting pin.
- TC-46**: Small mounting pin.
- TC-47**: Small mounting pin.
- TC-48**: Small mounting pin.
- TC-49**: Small mounting pin.
- TC-50**: Small mounting pin.
- TC-51**: Small mounting pin.
- TC-52**: Small mounting pin.

GRIP

TC-53

TC-54

TC-55

TC-56

TC-57

TC-58

TC-59

TC-60

TC-61

TC-62

TC-63

TC-64

TC-65

TC-66

TC-67

TC-68

TC-69

Parts List


Full Size Version

No.	Part Name	Qty.
TF-01	Outer Barrel	1
TF-02	Inner Barrel	1
TC-03	Hop-Up Chamber (L)	1
TC-04	Hop-Up Chamber (R)	1
TC-05	Hop-Up Plate	1
TC-06	Hop Adjustment Gear	1
TC-07	Washer	1
TC-08	Hop-Up Bucking	1
TC-09	Screw M2x6	2
TC-10	Recoil Spring Guide Plug	1
TC-11	Recoil Spring	1
TF-03	Spring Guard	1
TF-04	Slide	1
TC-14	Rail Cover	1
TC-15	Screw M4x2.6	1
TC-16	Rear Sight	1
TC-17	Rail Cover Pin	1
TC-18	Screw M2.5x12	1
TC-19	Air Nozzle	1
TC-20	Nozzle Housing	1
TC-21	Spring Block	2
TC-22	Nozzle Spring	2
TC-23	Set Screw M2x3	3
TC-24	Valve Spring	1
TC-25	Valve	1
TC-26	Valve Adjustment	1
TC-27	Airtight Rubber	1
TC-28	Screw M2.5x8	1
TF-05	Frame	1
TF-06	Compensator	1
TC-31	Screw M1.4x3	1
TC-32	Front Sight	1
TC-33	Screw M2.5x6	1
TC-34	Screw M3x6	2
TC-35	Plunger Pin Front	1
TC-36	Plunger Spring	1
TC-37	Plunger Pin Back	1
TC-38	Sear	1
TC-39	Disconnecter	1
TC-40	Hammer Set	1
TC-41	Grip Screw Bushing	2
TC-42	Frame Cover	1
TC-43	Knocker Lock	1
TC-44	Knocker Lock Spring	1
TC-45	Knocker Housing	1
TC-46	Knocker	1
TC-47	Knocker Spring	1
TC-48	Screw M2x6	1
TC-49	Screw M2.5x8	1
TC-50	Grip Safety	1

[illegible]

EXPLODED VIEW


PrimeMax Version

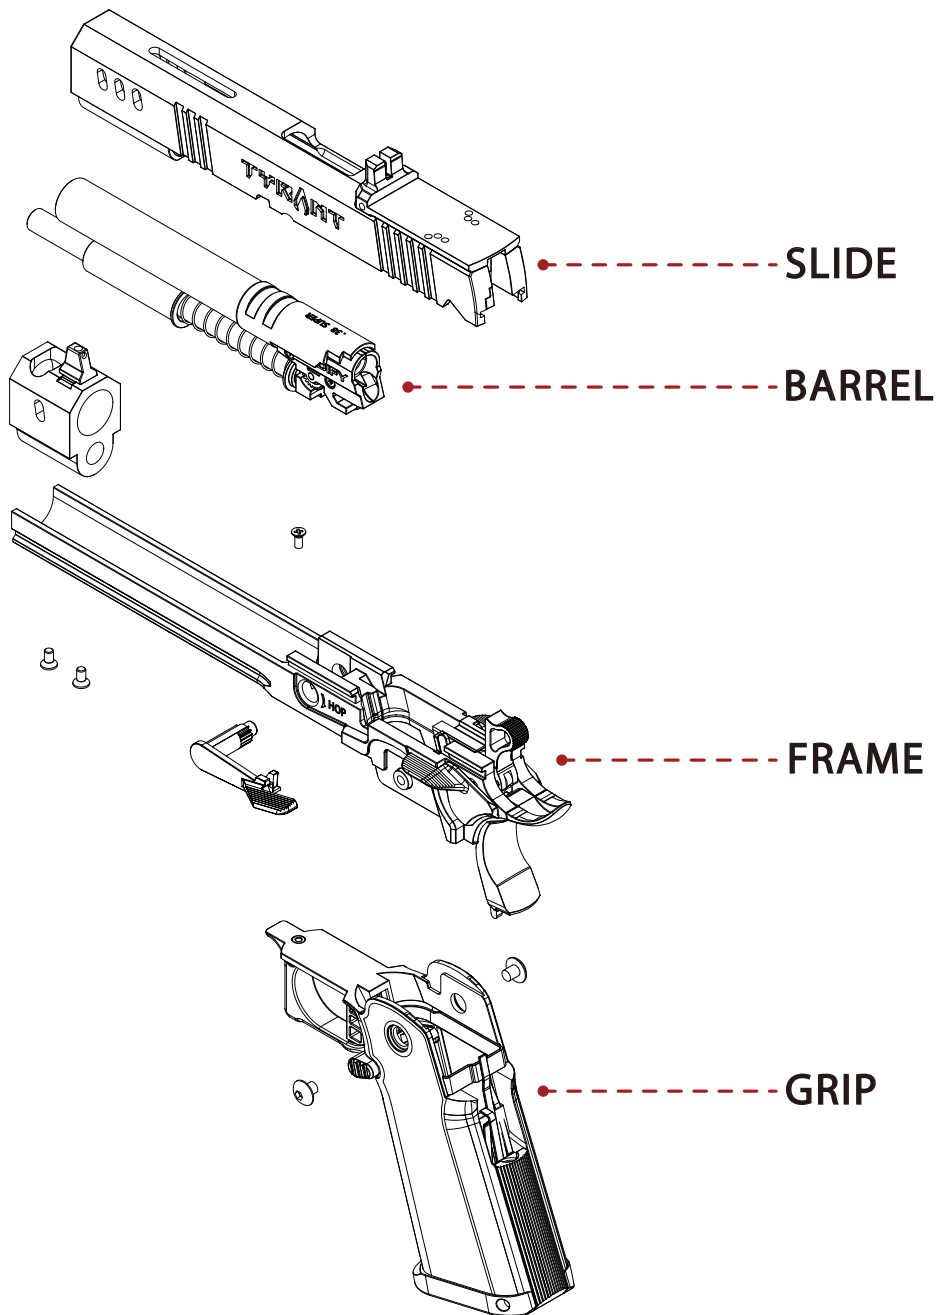


EXPLODED VIEW

PrimeMax Version


BARREL

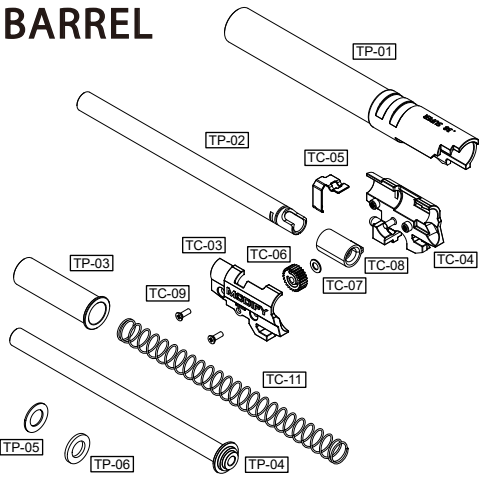


SLIDE

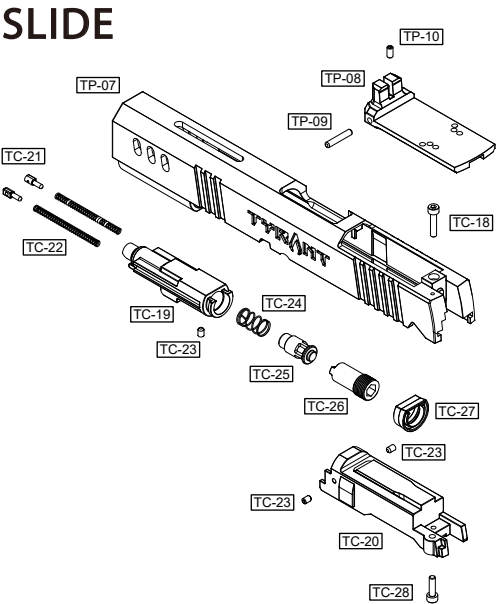

FRAME

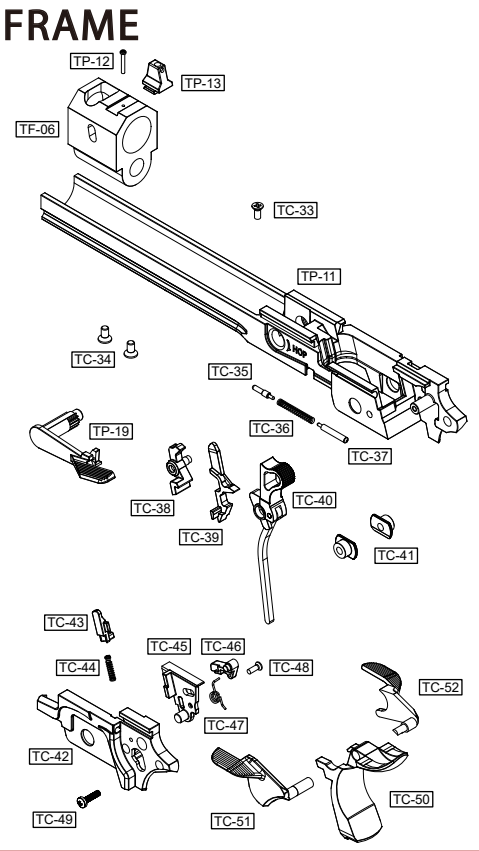

GRIP

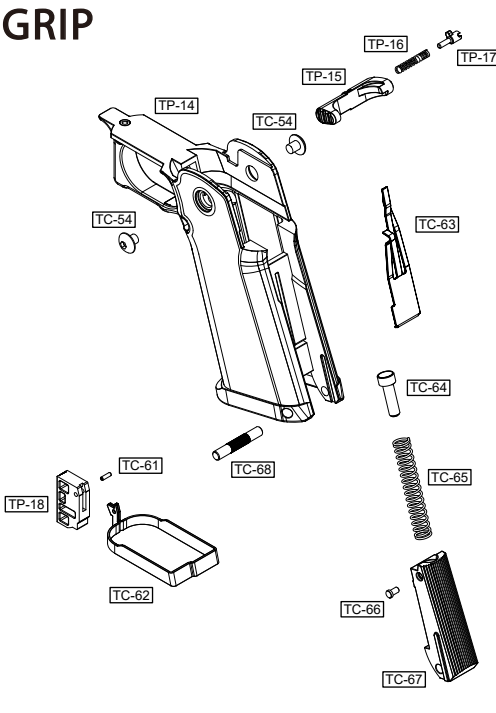

Parts List

PrimeMax Version



No.	Part Name	Qty.
TP-01	Outer Barrel	1
TP-02	Inner Barrel	1
TC-03	Hop-Up Chamber (L)	1
TC-04	Hop-Up Chamber (R)	1
TC-05	Hop-Up Plate	1
TC-06	Hop Adjustment Gear	1
TC-07	Washer	1
TC-08	Hop-Up Bucking	1
TC-09	Screw M2x6	2
TP-03	Recoil Spring Guide Plug	1
TC-11	Recoil Spring	1
TP-04	Spring Guard	1
TP-05	Washer	1
TP-06	Buffer	1
TP-07	Slide	1
TP-08	RMR Rail Plate	1
TP-09	Rail Plate Pin	1
TP-10	Set Screw M2.5x5	1
TC-18	Screw M2.5x12	1
TC-19	Air Nozzle	1
TC-20	Nozzle Housing	1
TC-21	Spring Block	2
TC-22	Nozzle Spring	2
TC-23	Set Screw M2x3	3
TC-24	Valve Spring	1
TC-25	Valve	1
TC-26	Valve Adjustment	1
TC-27	Airtight Rubber	1
TC-28	Screw M2.5x8	1
TF-06	Compensator	1
TP-11	Frame	1
TP-12	Screw M1.4x10	1
TP-13	Front Sight	1
TC-33	Screw M2.5x6	1
TC-34	Screw M3x6	2
TC-35	Plunger Pin Front	1
TC-36	Plunger Spring	1
TC-37	Plunger Pin Back	1
TC-38	Sear	1
TC-39	Disconnecter	1
TC-40	Hammer Set	1
TC-41	Grip Screw Bushing	2
TC-42	Frame Cover	1
TC-43	Knocker Lock	1
TC-44	Knocker Lock Spring	1
TC-45	Knocker Housing	1
TC-46	Knocker	1
TC 47	Knocker Spring	1
TC-48	Screw M2x6	1
TC-49	Screw M2.5x8	1

[illegible]


EXPLODED VIEW

Magazine

GAS

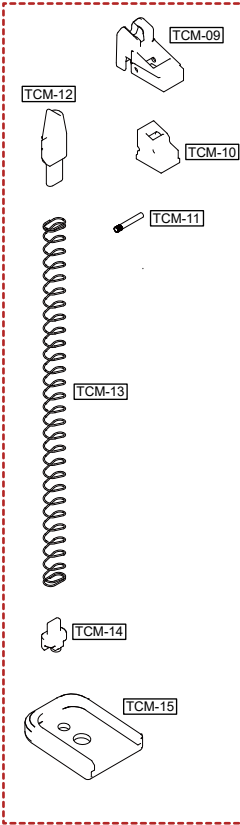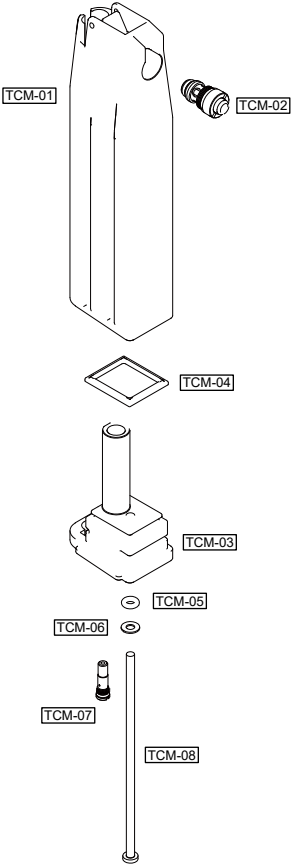

CO2

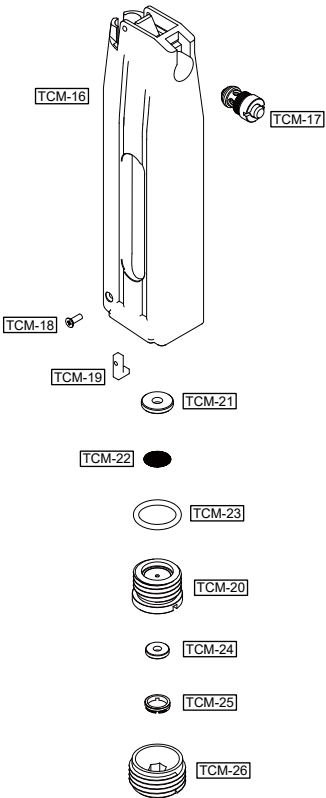

Parts List


TCM-01	Gas Magazine Body	1
TCM-02	Gas Valve	1
TCM-03	Magazine Lower Body	1
TCM-04	Seal Pad	1
TCM-05	O-ring	1
TCM-06	Washer	1
TCM-07	Gas Injection Valve	1
TCM-08	Magazine Spring	1
TCM-09	Feeding Lip	1
TCM-10	Lip Seal	1
TCM-11	Feeding Lip Pin	1
TCM-12	Magazine Follower	1
TCM-13	Magazine Spring	1

TCM-14	Magazine Spring Guide	1
TCM-15	Base Pad	1
TCM-16	CO2 Magazine Body	1
TCM-17	CO2 Valve	1
TCM-18	Screw M2x6	1
TCM-19	Guide Stop	1
TCM-20	Piercing Valve	1
TCM-21	Washer	1
TCM-22	Steel Web	1
TCM-23	O-ring	1
TCM-24	Washer	1
TCM-25	Screw	1
TCM-26	CO2 End Cap	1


EXPLODED VIEW

Japan Compact Version


BARREL

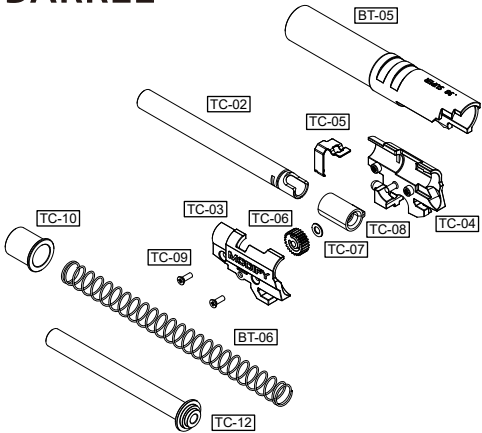

SLIDE

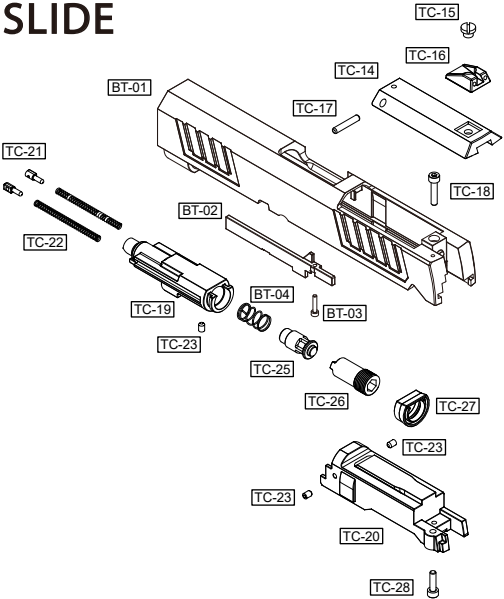

FRAME

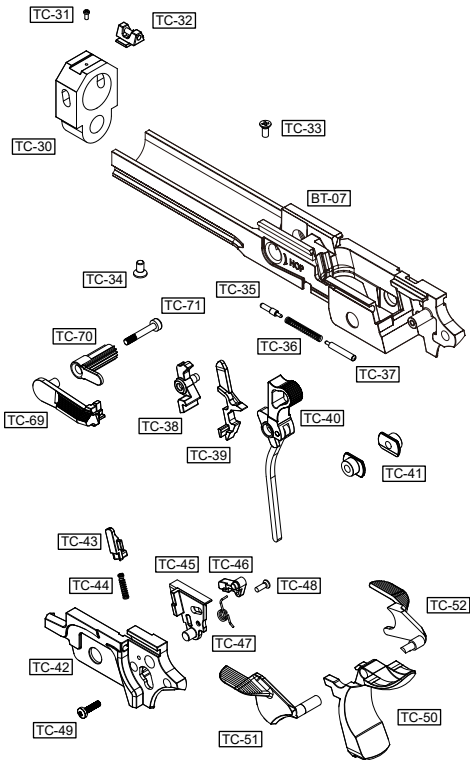

GRIP

