



Outlook/Structure

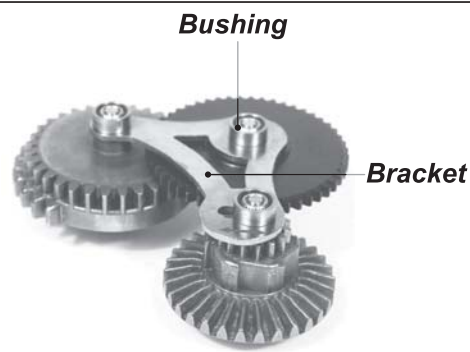

Accessories

Anti-reversal Latch

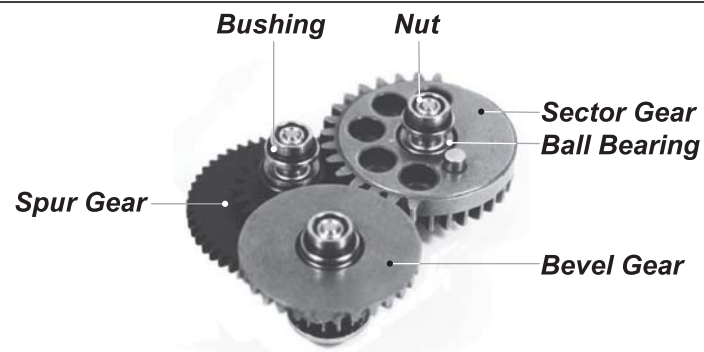

Gear Key (option)



■ Loading Instruction



- Attach the Anti-reversal Latch correctly as shown.

- Install the gear set in the proper position as shown.
- The bevel gear can be adjusted slightly along the ARC-shaped hole on the bracket until the gear set fixed in position.

■ Unloading Instruction



- Screw the Anti-reversal latch with a screwdriver clockwise about 60 degrees to release the spring. When a spring is released, a release sound is output.

- Dismantle the gear set by removing the nut using the Gear Key.
 - ※The Gear Key is an option.
 - ※Refer all servicing to qualified personal. Any unauthorized changes or modifications to this product would void the user's authority to operate.
 - ※Gears and Bushings can be replaced. When replacement parts are required, make sure to use only parts with the same characteristics as the originals, as recommended by the manufacturer.

- Maintenance:
 - 1.Remove the modular gear set from the case.
 - 2.Clean the modular gear set.
 - 3.Drop some bearing oil in the ball bearing to complete the maintenance.