



**Follow the steps below to load/unload the bushings.**

**(A) Load**

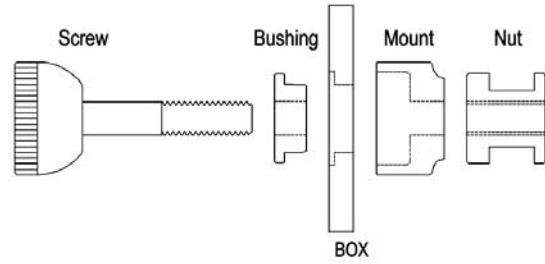

1. Insert the Screw into the Bushing, the Box and the Mount in turn, then turn the Nut in.
2. Tighten the Nut with the accessory spanner.


**(B) Unload**

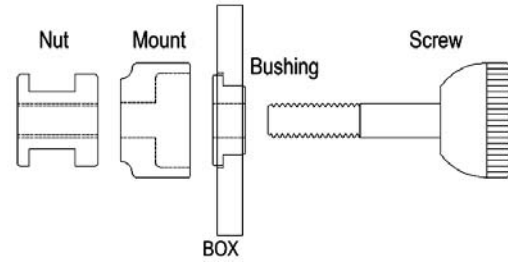

1. Insert the Screw into the Box with bushings, then turn the mount and the Nut in.
2. Tighten the Nut with the accessory spanner.


**Follow the steps below to load/unload the bushings.**

**(A) Load**

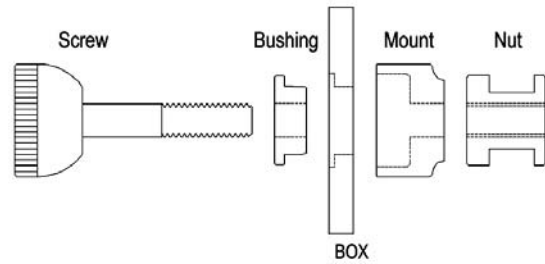

1. Insert the Screw into the Bushing, the Box and the Mount in turn, then turn the Nut in.
2. Tighten the Nut with the accessory spanner.


**(B) Unload**

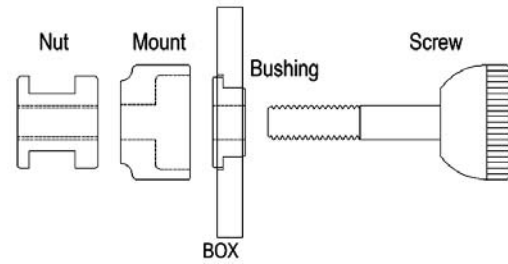

1. Insert the Screw into the Box with bushings, then turn the Mount and the Nut in.
2. Tighten the Nut with the accessory spanner.


**Follow the steps below to load/unload the bushings.**

**(A) Load**

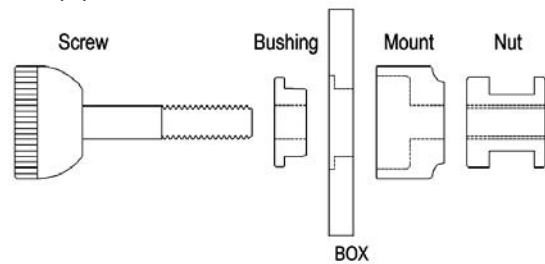

1. Insert the Screw into the Bushing, the Box and the Mount in turn, then turn the Nut in.
2. Tighten the Nut with the accessory spanner.


**(B) Unload**

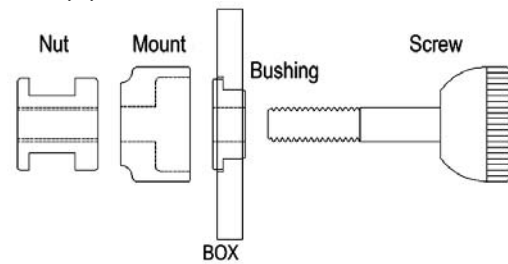

1. Insert the Screw into the Box with bushings, then turn the Mount and the Nut in.
2. Tighten the Nut with the accessory spanner.


**Follow the steps below to load/unload the bushings.**

**(A) Load**

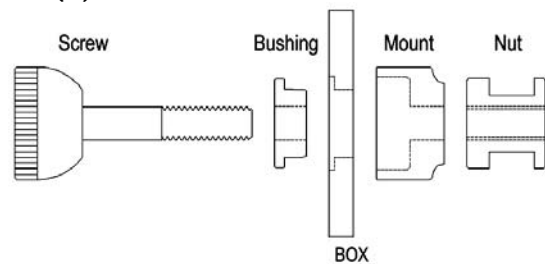

1. Insert the Screw into the Bushing, the Box and the Mount in turn, then turn the Nut in.
2. Tighten the Nut with the accessory spanner.


**(B) Unload**

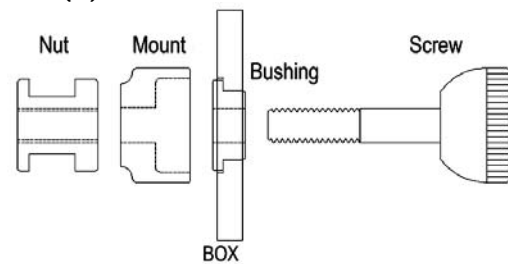

1. Insert the Screw into the Box with bushings, then turn the Mount and the Nut in.
2. Tighten the Nut with the accessory spanner.


**Follow the steps below to load/unload the bushings.**

**(A) Load**

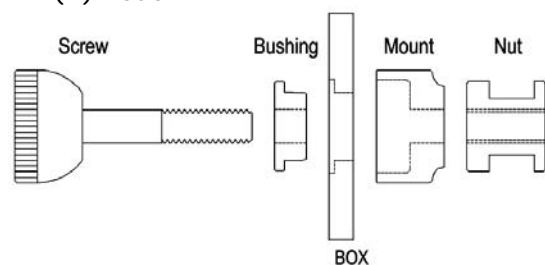

1. Insert the Screw into the Bushing, the Box and the Mount in turn, then turn the Nut in.
2. Tighten the Nut with the accessory spanner.

**(B) Unload**

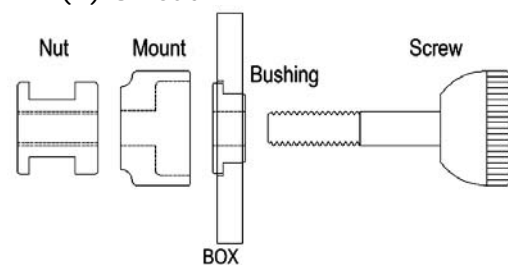

1. Insert the Screw into the Box with bushings, then turn the mount and the Nut in.
2. Tighten the Nut with the accessory spanner.