



Follow the steps below to load/unload the bushings.

(A) Load

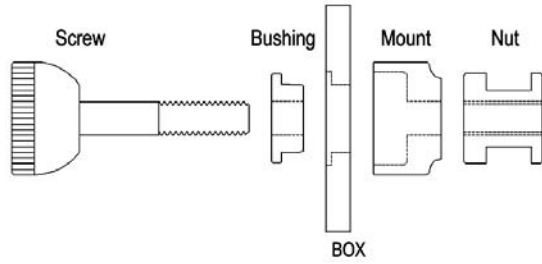

1. Insert the Screw into the Bushing, the Box and the Mount in turn, then turn the Nut in.
2. Tighten the Nut with the accessory spanner.

(B) Unload

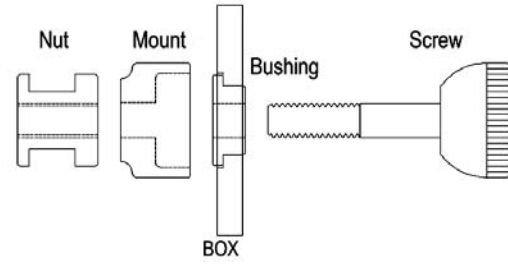

1. Insert the Screw into the Box with bushings, then turn the mount and the Nut in.
2. Tighten the Nut with the accessory spanner.